

DTB-225 USB Software Upgrade procedures

1. Go to http://www.aonvision.com/supt_download.htm to download new F/W image.
2. Please decompress the image file, and put them onto the root of your USB flash disk.
3. Power on the DTB-225.
4. Plug USB flash disk in to DTB-225.
5. Switch to OSD Menu→"Advanced Option"→"Firmware Upgrade".






6. Select "Upgrade Image" and the corresponding filenames show in "Upgrade File".

Example: From version V1.1.5 upgrade to version V1.2.0.



7. Press "Start Upgrade".

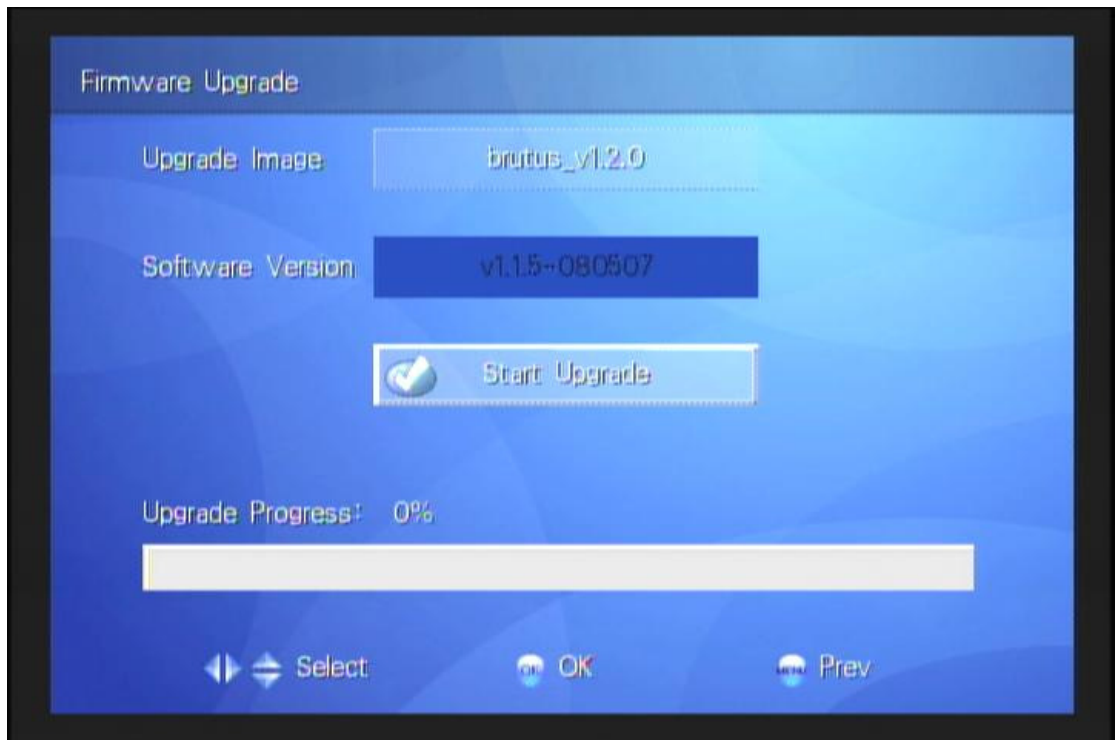

8. Start firmware Upgrade, Press OK





After upgrading F/W completely, the DTB-225 will be auto-shutdown.

Note: Please do not Power Off the DUT during F/W upgrading. Otherwise the DTB-225 will be crashed.